

Wireless mouse/keyboard not working:

1. Most wireless devices have a reset button. Locate the reset button and press it.
2. Restart the computer.
3. Make sure there are fresh batteries in the device.